

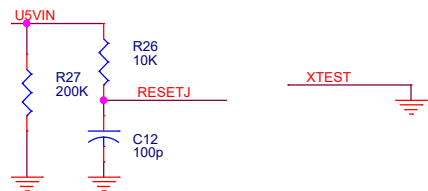


When using DB25 connector PPLH pin should be pull high.

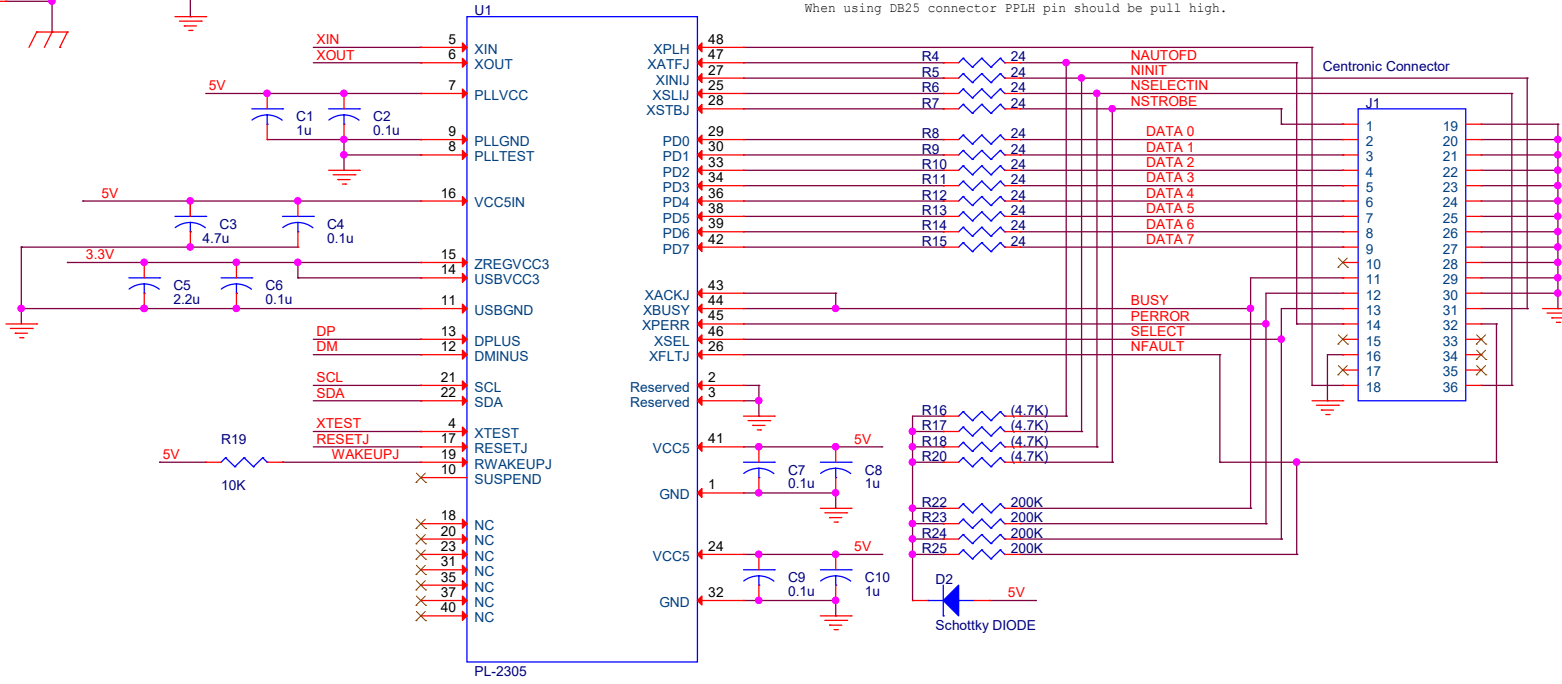


C8 should be placed close to U3

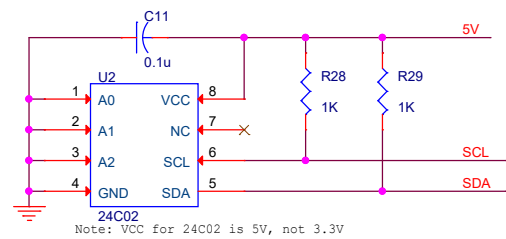

Note: VCC for 24C02 is 5V, not 3.3V

The traces inside this block should be wider. And, this circuit should be placed close to U1

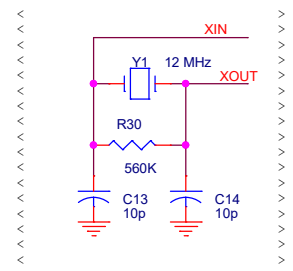

NOTE: Part Value of some components with () means that it should not be mounted at current time (e.g. R16).